



# PIA-100

## FAST SETUP INSTRUCTIONS

FREMANTLEMEDIA



THAMES

"Pop Idol" is a Trademark of 19 Television Ltd & FremantleMedia Operations BV. Based on the television programme "Pop Idol" co-produced by Thames Television and 19 Television Productions and licensed by Fremantle Brand Licensing. [www.popidoltv.com](http://www.popidoltv.com)

**Congratulations** on purchasing this Pop Idol PIA-100. You will find inside a waistband amplifier and headset microphone with the Pop Idol DVD karaoke disc. Please read this fast set up sheet fully before operating the unit. Do not dispose of any packaging until you are totally happy with the product, as you will need this to return the product if it is faulty.

 
Please dispose of any packaging materials using the correct recycling method in your area.

If you experience any difficulties operating this equipment then please call the Acoustic Solutions help-line on 01327340601 (+441327 342255 outside the UK).

This help-line is open between 09:00hrs to 13:00hrs and 14:00hrs to 16:30hrs GMT Monday to Friday.

### STEP 6) Star playing the Pop Idol DVD

You are now one step away from Pop Idol Karaoke! Simply put the DVD supplied into your DVD player, using the navigation keys on your remote control you will be able to choose options from the main menu.

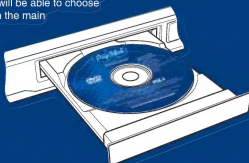


### STEP 7) Get in touch

If you would like to know more about the Pop Idol Karaoke products, or would like access to the latest karaoke discs, check out our website [www.thekaraokeclub.com/popidol](http://www.thekaraokeclub.com/popidol)

Further Pop Idol discs can be ordered from The Music Factory Entertainment Group on 01709 710022 in the UK or +441709 710022 outside the UK.

### STEP 1) Fitting batteries

 
Before you begin using the waistband amplifier you must fit the batteries (4 x 1.5V AA batteries (not supplied)). The battery compartment is located on the back of the waistband amplifier. It is necessary to remove the battery lid securing screw before removing the battery cover. Once the screw is removed you can access the battery compartment by sliding off the battery compartment lid. Inside the battery compartment a ribbon is fitted, this should be placed under the batteries to allow the batteries to be removed by pulling this ribbon in the future. Ensure that the batteries are inserted the correct way around before replacing the battery compartment door.

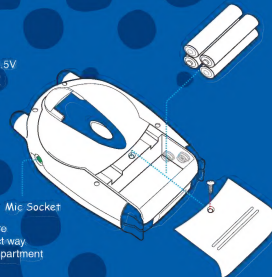

Please note: if the waistband amp is not going to be used for long periods of time, the batteries should be removed to avoid battery leakage inside the unit. DO NOT DISPOSE OF REDUNDANT BATTERIES BY THROWING THEM ONTO A FIRE, PLEASE DISPOSE OF THEM CAREFULLY INTO A REGULAR WASTE BIN, OR DISPOSE OF THEM IN LINE WITH WASTE DISPOSAL DIRECTIVES IN YOUR AREA.

### STEP 5) Using the tone control

 The tone control allows you to make your voice sound clearer. Turn the tone control clockwise if you have a low voice and anti-clockwise if your voice is quite high. This control should be set to your preference.



### STEP 4) Using the volume control

 
Turn the volume control clockwise to turn on the waistband amplifier. The red power LED will illuminate on the top of the waistband amplifier. Continue to rotate the volume control clockwise to increase the operating volume of the waistband amplifier. Take care not to turn the volume up too much as feedback may occur. Feedback is a loud screeching noise which occurs when the microphone is too close to the speaker. This can be avoided by turning down the volume or moving the microphone away from the speaker.



LED power indicator will come on

### STEP 2) Fitting the waist band amplifier


The belt clip fitted to the rear of the waistband amplifier will allow it to be fitted to your belt. If you do not wear a belt of your own we have supplied an optional belt which you can wear. The belt can be adjusted to your waist size by sliding the belt adjuster until the belt fits comfortably. To attach the Pop Idol waistband amplifier, simply slide the unit onto the belt.

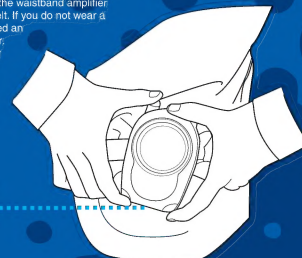

Slide Waistband Amp onto belt.

### STEP 3) Wearing the headset mic

 This PIA-100 is supplied with a head-worn microphone to allow mobility when singing karaoke. It is necessary to fit the boom mic into the headset before placing it on your head. Simply push the mic boom into the side of the headset to locate it. Fit this to your head like you would with headphones, placing the flat foam pads just in front of your ears. Move the microphones so that it is approximately 2-3 cm away from your mouth. At the end of the cable coming from the microphone is a small plug, put this into the 'MIC' socket on the side of the waistband amplifier.

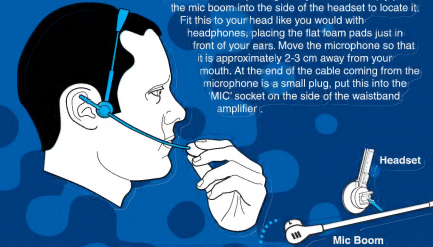

Ensure this part faces mouth

If you are having problems, please try the following ideas:

#### 1) Cannot get any sound from the amplifier

- Check batteries have been inserted correctly, and power LED indicator light is on
- Ensure batteries are not too low
- Ensure mic has been connected into mic input socket
- Ensure volume control has been turned up
- If still no sound, please refer unit to the shop where it was purchased

#### 2) Mic sounds faint

- Ensure mic element is correct way around in relation to mouth (see step3)
- Ensure mic element is close to mouth
- Ensure mic volume is turned up enough
- Ensure batteries are not too low

If you need more help, then please call our customer helpline on 01327 340601

#### 3) Large amount of feedback occurs

- Mic is too close to speaker
- Volume is set too high
- Tone control set too high

#### 4) Cannot get DVD to play

- Ensure disk is inserted with label uppermost
- Ensure DVD is set to UK region